Print on plain white paper - Part # 122919

Installation Instructions for the KNIGHT SUPERLITE MODEL K UNIT/WALL MOUNT

TO INSTALL THE LIGHT:
Slip the Bearing Washer and Light Bushing over the electrical cord and onto the Arm Bearing Assembly. **Lubricate liberally with lubriplate grease supplied.**

NOTE:
The Light Bushing is not required when mounting the light in a post with a small diameter opening [(1.375" Dia. (34.93mm)]. **Lubricate liberally with lubriplate grease supplied.**

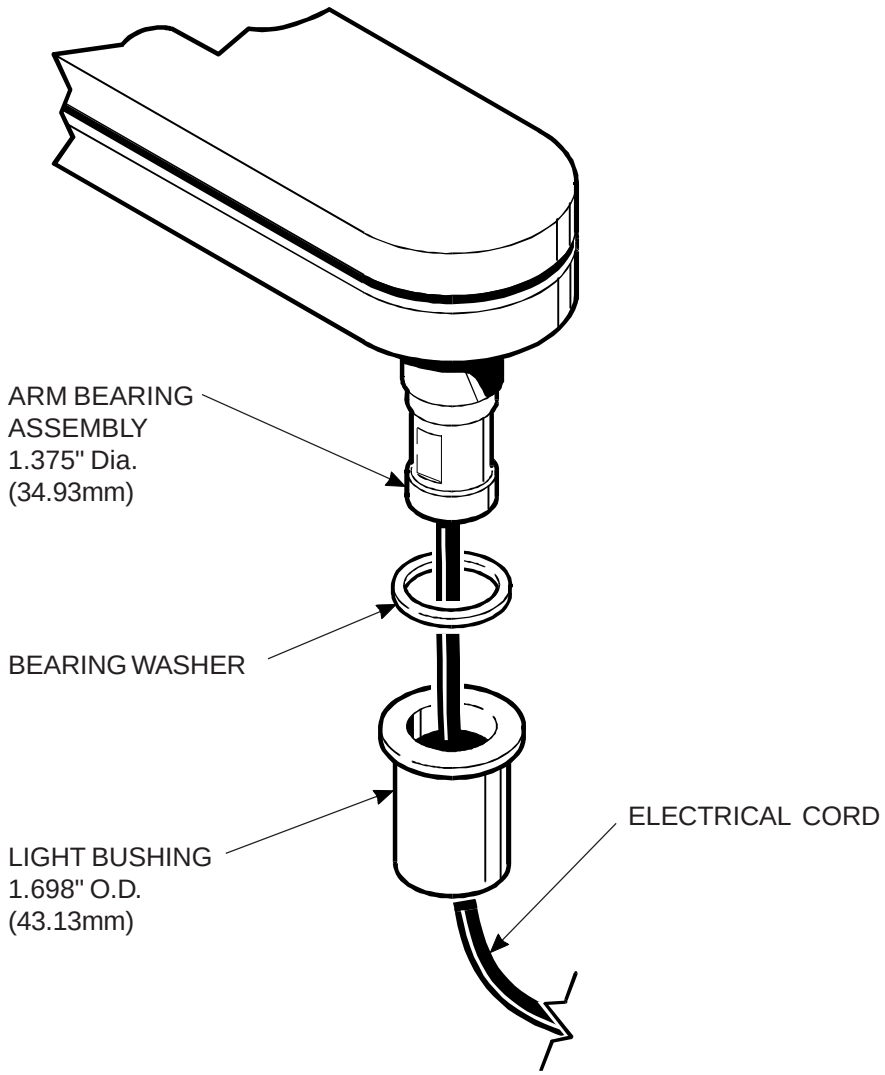

Knight®
by Midmark

Midmark Corporation • P O Box 286 • 60 Vista Drive
Versailles • Ohio • 45380-0286 • www.midmark.com
Phone: 937-526-3662 Fax: 937-526-5542

TP1189 REV. B (9/99)